


EST. 1904

ELJER

BY AMERICAN STANDARD

Installation Instructions

1640.315.XXX

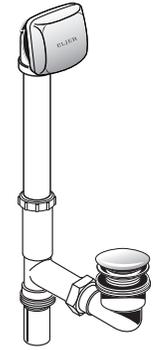

DEEP SOAK® BATH DRAIN

BATH WASTE AND OVERFLOW WITH TOE TAPPER DRAIN PLUG


Thank you for selecting an Eljer product.

To ensure that your installation proceeds smoothly--please read these instructions carefully before you begin.

RECOMMENDED TOOLS



Channel Locks




Plumbers' Putty or Caulking



Phillips Screwdriver

ROUGH-IN DIMENSIONS

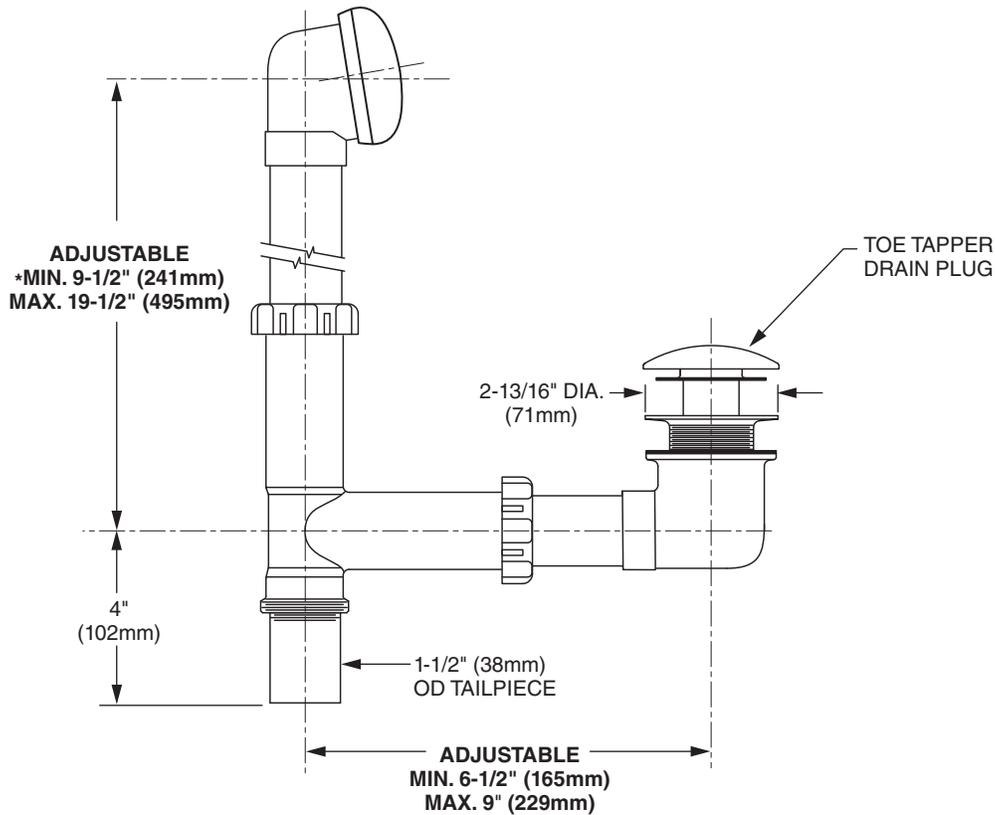


* NOTE: For overflow heights less than 17" (432mm), cutting the pipe is required.

1 INSTALL DRAIN PLUG AND ELL (STANDARD AND OVER-THE-RIM DRAINS)

- Apply putty to underside of DRAIN PLUG (1) and drop into drain outlet.
- Slip RUBBER WASHER (2) on from below and thread DRAIN PLUG (1) into DRAIN ELL ASSEMBLY (3).

NOTE: TUB IS SHOWN CUT AWAY FOR CLARITY OF INSTALLATION.

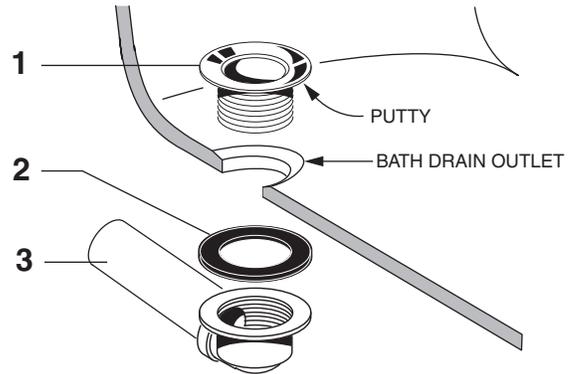

2 INSTALL OVERFLOW ASSEMBLY AND DRAIN TEE (STANDARD DRAIN)

- Loosen SLIP JOINT NUT & SEAL (1) and install onto OVERFLOW TUBE (2). Install OVERFLOW TUBE ASSEMBLY (2) into the appropriate leg of the DRAIN TEE (3). Apply sealant to threads of TAILPIECE (6) and thread into DRAIN TEE (3). Install OVERFLOW GASKET (4) to OVERFLOW TUBE ASSEMBLY (2). (Adjust OVERFLOW GASKET (4) to contour of tub. FIG. 1.
- Loosen SLIP JOINT NUT & SEAL (5) and install onto DRAIN ELL ASSEMBLY (6). Install DRAIN ELL ASSEMBLY (6) into the horizontal leg of the DRAIN TEE (3). FIG. 2.

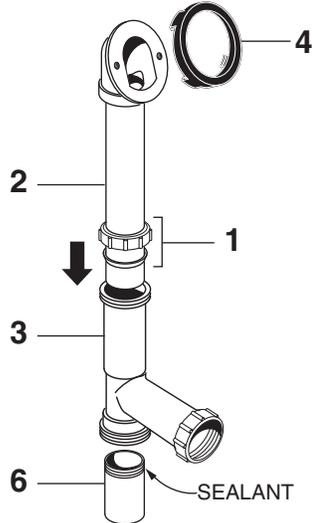


FIG.1


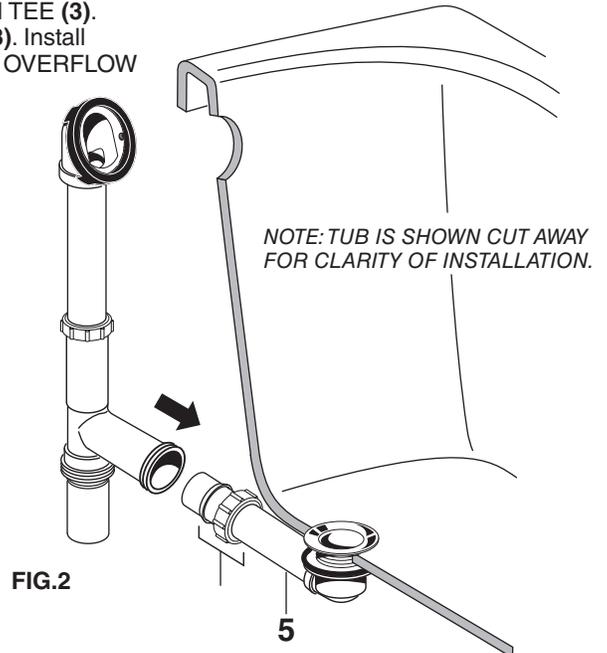


FIG.2

NOTE: TUB IS SHOWN CUT AWAY FOR CLARITY OF INSTALLATION.

3 SECURE OVERFLOW ASSEMBLY TO TUB (STANDARD DRAIN)

- Align the holes in the RETAINING PLATE (1) with those in the GASKET (2) and OVERFLOW FLANGE (3). Install SCREWS (4), tighten snugly (do not over tighten). The overflow gasket (behind tub wall) will begin to seal as the RETAINING PLATE (1) becomes tighter. The overflow gasket can be rotated for desired fit.
- Align the ESCUTCHEON (5) with the RETAINING PLATE (1) and push onto RETAINING PLATE (1) until the ESCUTCHEON (5) snaps into place.
- When you are satisfied with the overall fit of the drain, go back and tighten all joints to make a water tight seal.


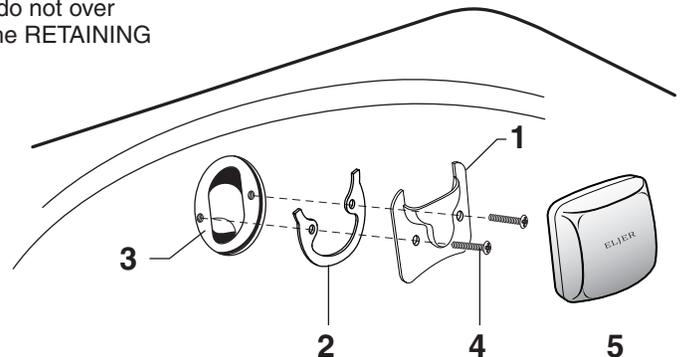


4

ABOVE FLOOR OUTLET INSTALLATION (STANDARD DRAIN)

Note: Waste outlet can be installed either above the floor or below floor. Fig.1.

- For above floor drain outlet, Rotate DRAIN TEE ASSEMBLY (1) 90 degrees so TAILPIECE (2) faces out the back from tub as shown.

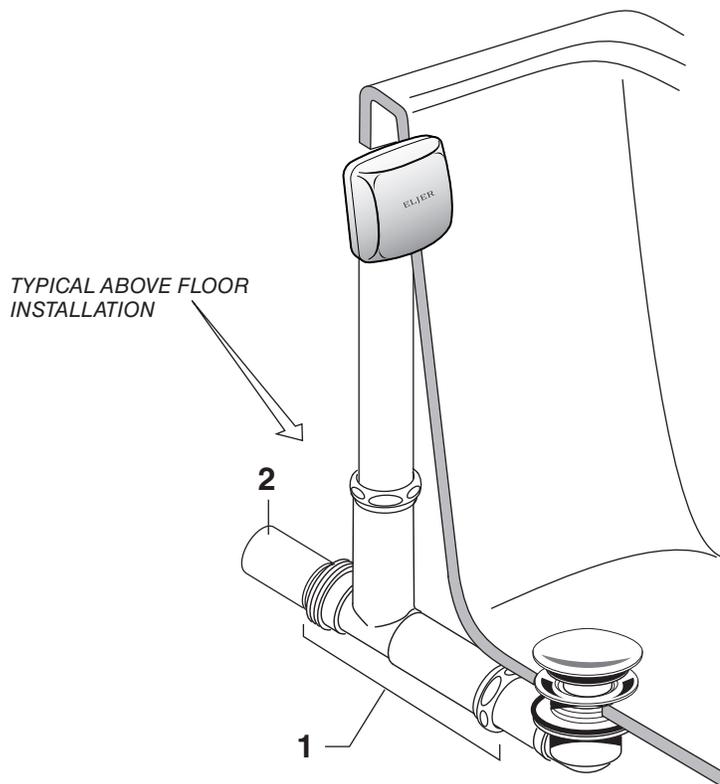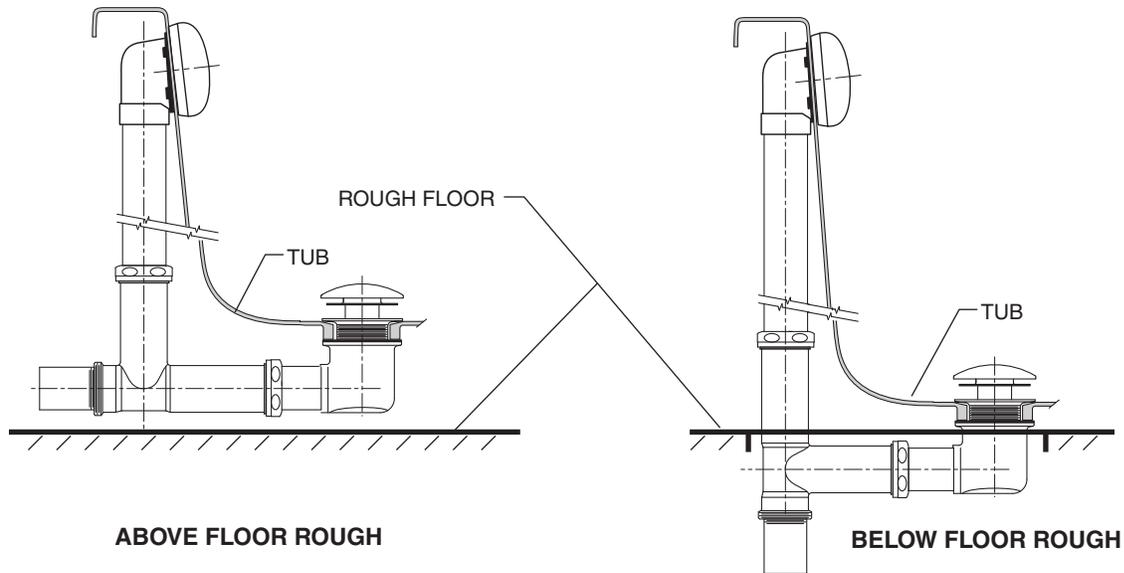

NOTE: TUB IS SHOWN CUT AWAY FOR CLARITY OF INSTALLATION.

CARE INSTRUCTIONS:

DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH.

DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.

EST. 1904

ELJER


BY AMERICAN STANDARD

DEEP SOAK® BATH DRAIN

BATH WASTE AND OVERFLOW
WITH TOE TAPPER DRAIN PLUG

PRODUCT NUMBER

1640.315.XXX

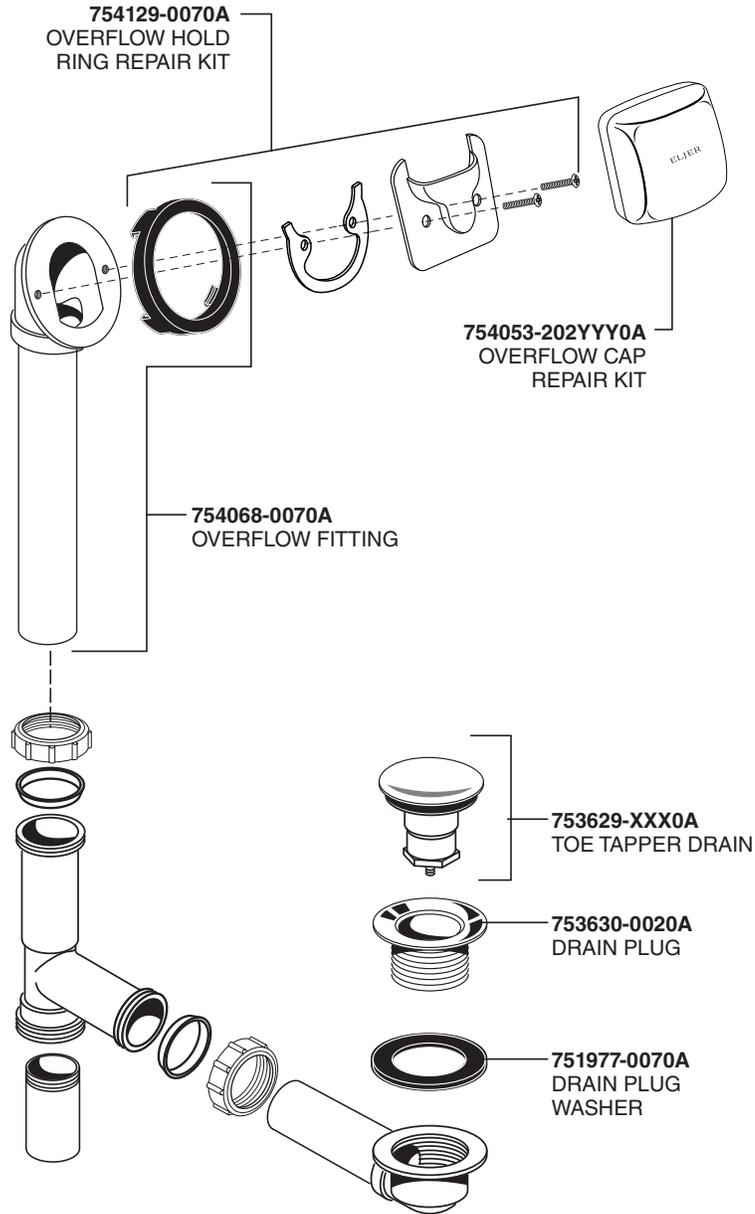

Replace the "YYY" with appropriate finish code

CHROME	002
WHITE	020

CUSTOMER SERVICE ASSISTANCE

For toll-free Customer Service, call:

IN USA 1-(800) 442-1902

IN MEXICO 01-800-839-1200

Product names listed herein are trademarks of ELJER
© ELJER 2017